


BUTLER MUG HOLDER INSTALLATION STEPS FOR THE BMW 1200 LT

Please note that, although this is a very simple procedure, Glass Act will not accept any responsibility for mistakes made that may lead to unsatisfactory results or otherwise damage to any of the motorcycle parts. For assistance with this procedure please call Glass Act at 512-768-3908.

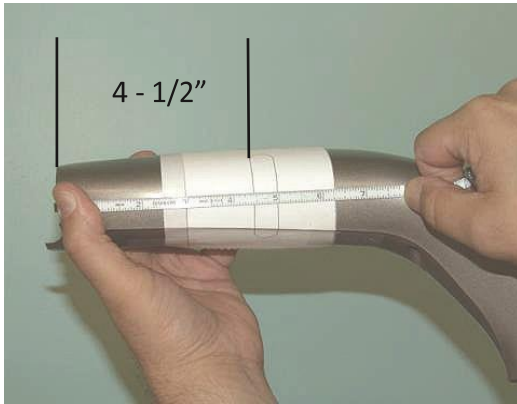

STEP 1:

REMOVE THE PLASTIC HANDLEBAR COVERS FROM THE LEFT HANDLEBAR AND PUT THEM BACK TOGETHER (OFF THE BIKE) USING THE ORIGINAL SCREWS. REMOVE THE TEMPLATE BACKING AND STICK THE TEMPLATE ON THE COVERS AS SHOWN.

CAREFULLY ALIGN THE HORIZONTAL LINE ON THE TEMPLATE WITH THE JOINT BETWEEN THE TWO PIECES OF PLASTIC (THAT IS TO THE INSIDE OF THE HANDLEBAR) AND MAKE THE LEFT VERTICAL LINE OF THE "CUT-OUT" 4 - 1/2" FROM THE END OF THE TOP PIECE OF PLASTIC THAT GOES TOWARD THE HANDLEBAR GRIP.



STEP 2:

USING A ROTARY CUTTING WHEEL (AS IS AVAILABLE WITH A DREMEL TOOL), CAREFULLY CUT ALONG THE VERTICAL LINES OF THE CUT-OUT.



STEP 3:

USING A CYLINDRICAL OR BALL NOSED CUTTING BIT, CAREFULLY TRIM OUT THE ROUNDED ENDS OF THE CUT-OUT.



STEP 4:

FINISH TRIMMING WILL BE REQUIRED. YOU WANT THIS TO BE A CLEAN JOB. IT IS EASY TO DO. AND, EVERYONE SHOULD HAVE A DREMEL, OR SIMILAR ROTARY TOOL. AFTER 40 YEARS OF MACHINE SHOP WORK, I HAVE FOUND THIS TYPE OF TOOL TO BE INDISPENSABLE. EVEN IF YOU ARE NOT INCLINED TO BE A MACHINIST, POSSESSING THIS TYPE OF TOOL WILL PROVE TO BE VERY REWARDING. THEY ARE AVAILABLE AT LOWES, HOME DEPOT, ETC.